




COT TO GO

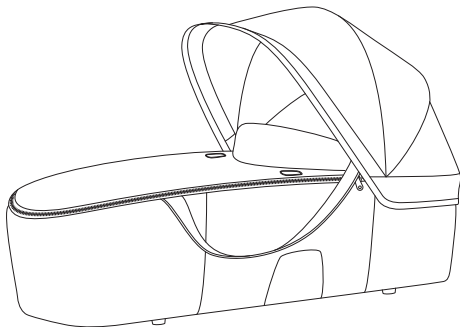

**PREPARING THE COT****6****USING THE CANOPY****9****CARRY THE COT****10****ATTACHING THE CAR SEAT ADAPTERS****11****ATTACHING THE COT TO GO****14****FOLDING THE COT TO GO****16****USING THE RAIN COVER****20****REMOVING THE FABRIC****21**

**AUFBAU DES KINDERWAGENAUFSATZES****6****VERWENDUNG DES SONNENDACHS****9****TRAGEN DES KINDERWAGENAUFSATZES****10****ANBRINGEN DER ADAPTER****11****ANBRINGEN DES COT TO GO****14****ZUSAMMENFALTEN DES COT TO GO****16****VERWENDUNG DES REGENVERDECKS****20****ABNEHMEN DES BEZUGES****21**

**PREPARAR EL CAPAZO****6****USO DE LA CAPOTA SOLAR****9****LLEVAR EL CAPAZO****10****COLOCACIÓN DEL ADAPTADOR****11****ADAPTACIÓN DEL COT TO GO****14****PLEGADO DEL COT TO GO****16****USO DE LA BURBUJA DE LLUVIA****20****EXTRACCIÓN DE LA FUNDA DE LA SILLA****21**



PRÉPARATION DE LA NACELLE

6



UTILISATION DU CANOPY PARE-SOLEIL

9



PORTER LA NACELLE

10



INSTALLATION DES ADAPTATEURS

11



ATTACHER LA COT TO GO

14



PLIAGE LA COT TO GO

16



UTILISATION DE L'HABILLAGE PLUIE

20






RETIRER LA HOUSSE DE LA NACELLE



21




1

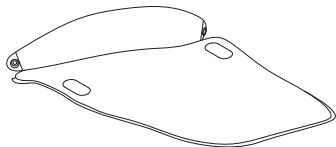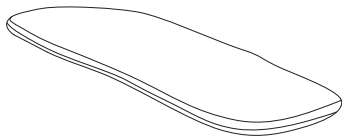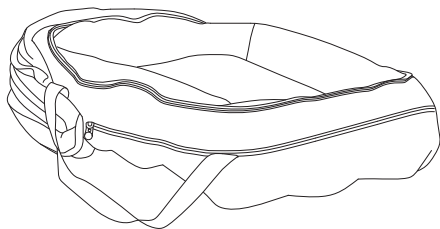

2

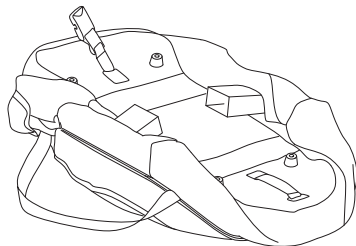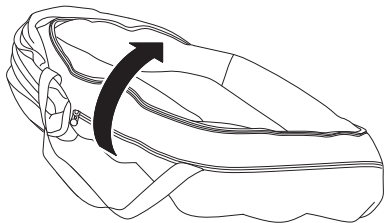


3

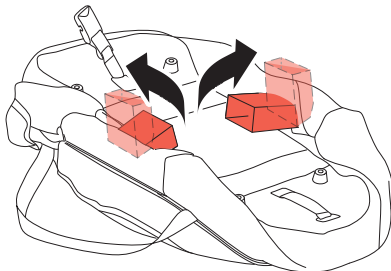



4

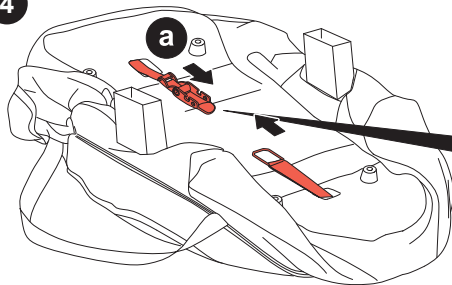




a

b

c


d

click



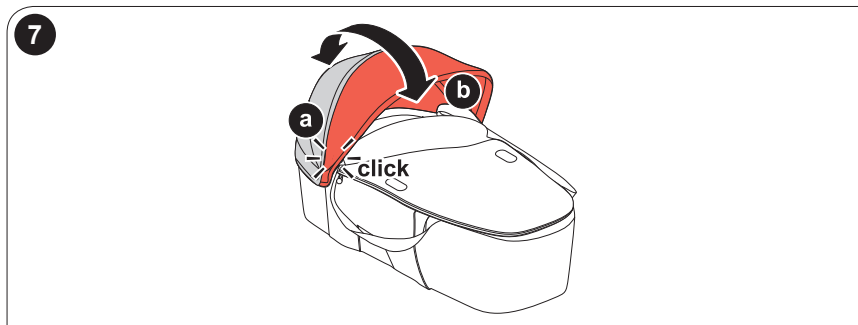
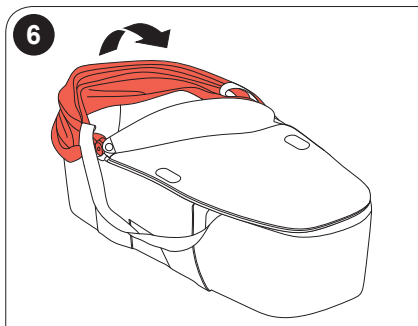
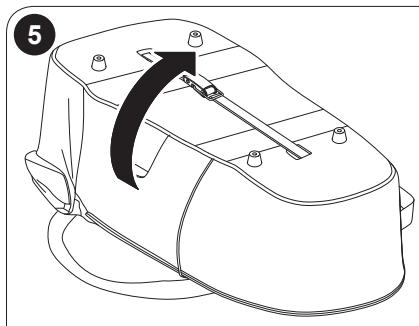




1


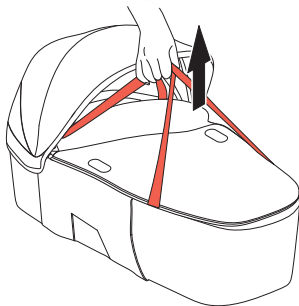


1

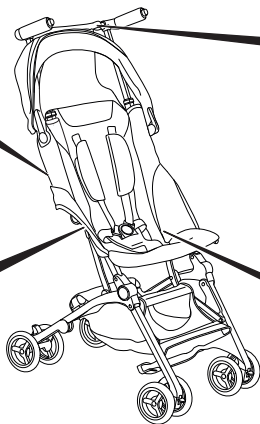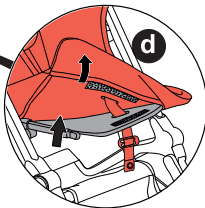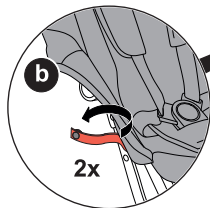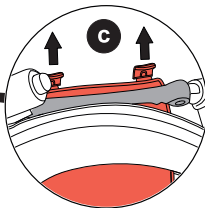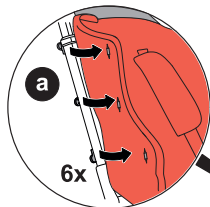





2

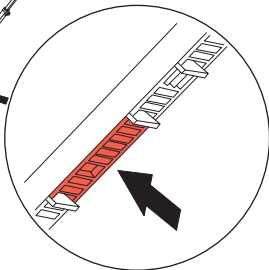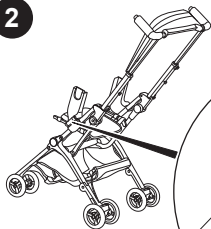

Pocket +


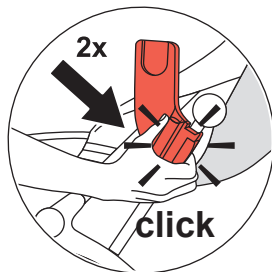


optional



3

Qbit+

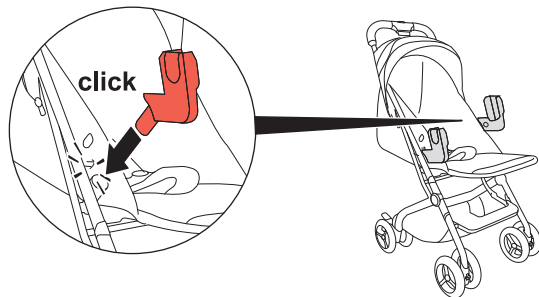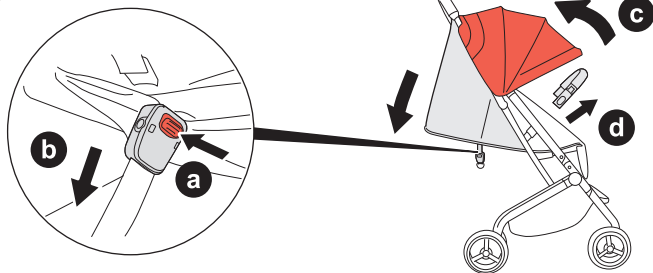


optional






1

Pockit +

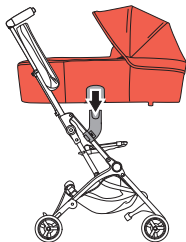


2

Qbit +




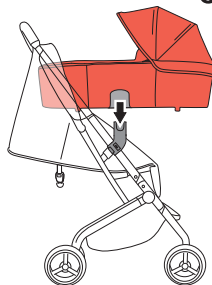





3 Pockit +

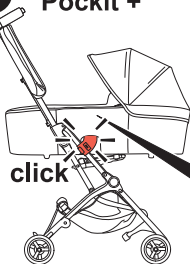


Qbit +

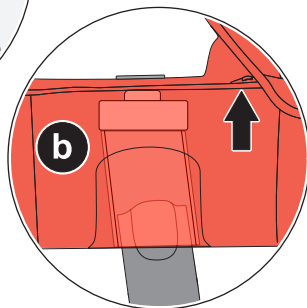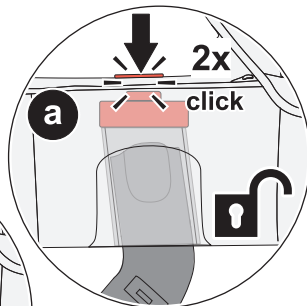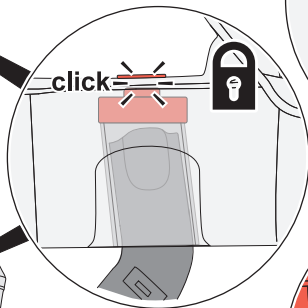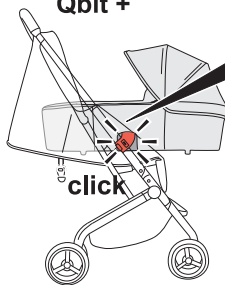

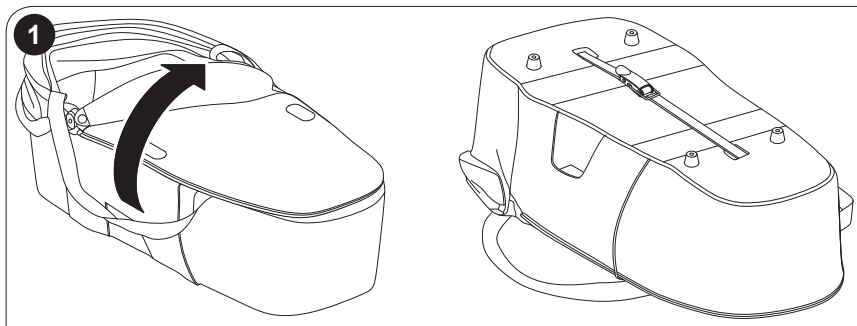





2

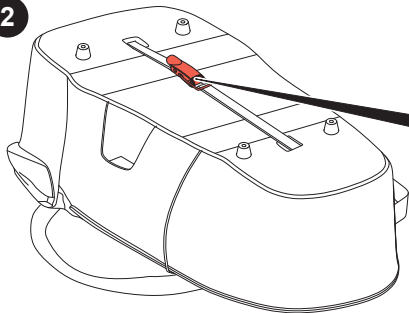


a

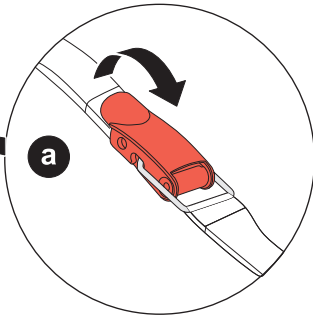

b

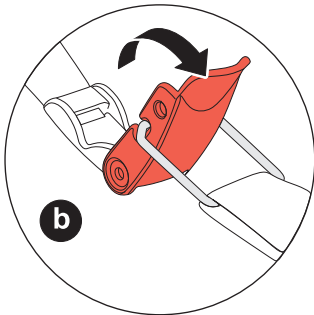


c





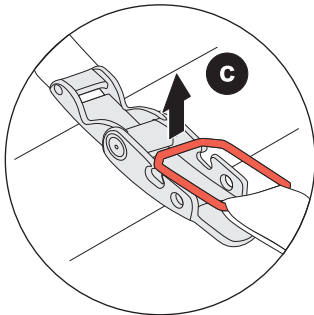








3

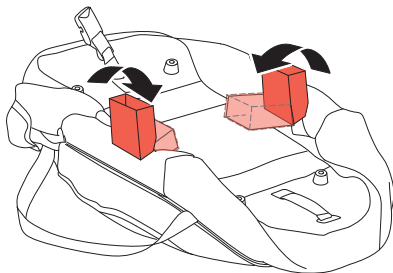


4

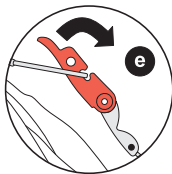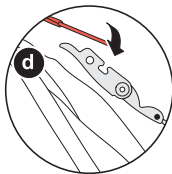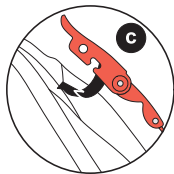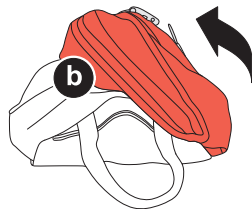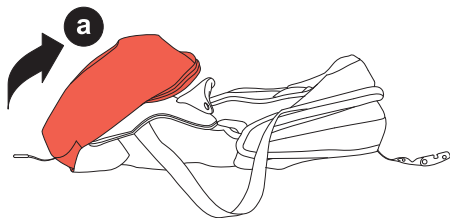


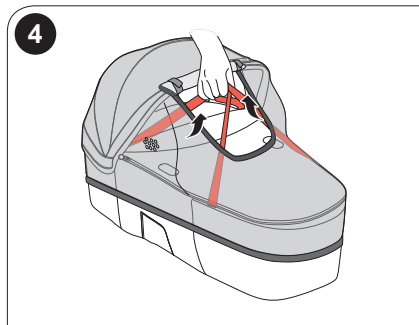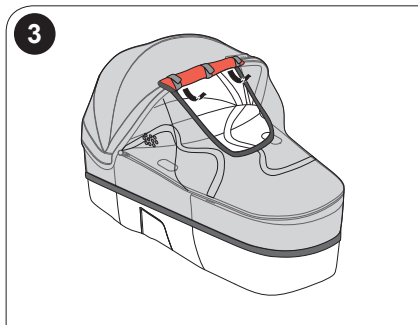
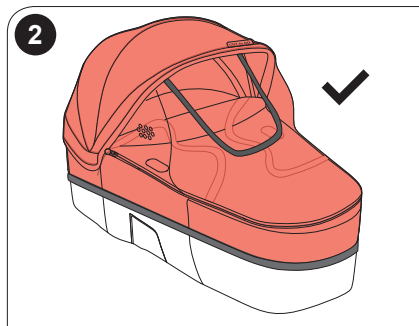
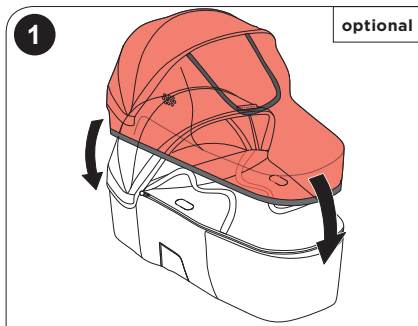


1

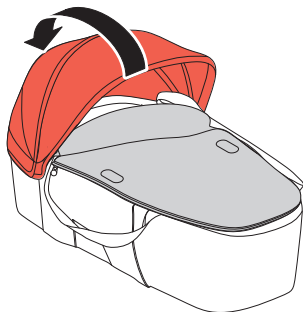


2

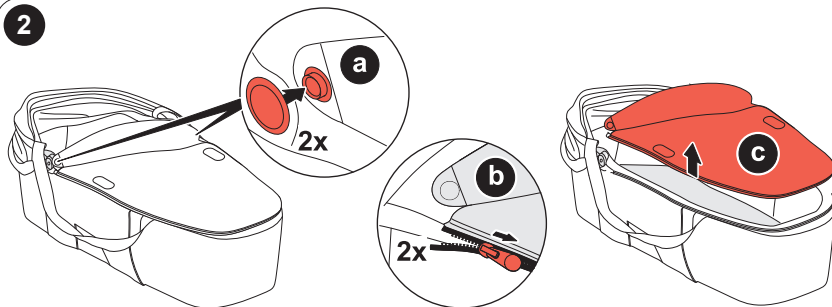

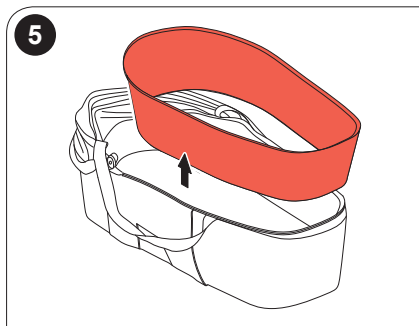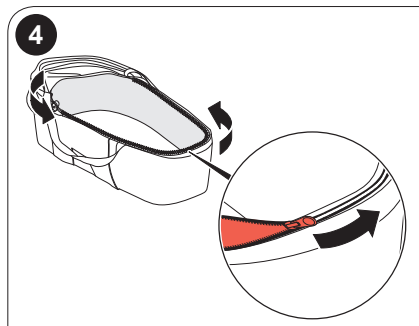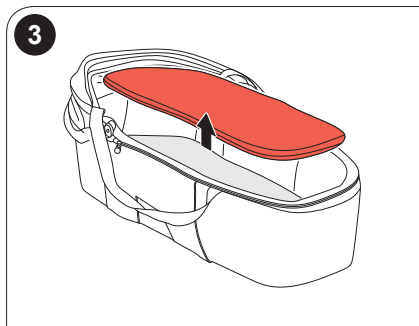

6

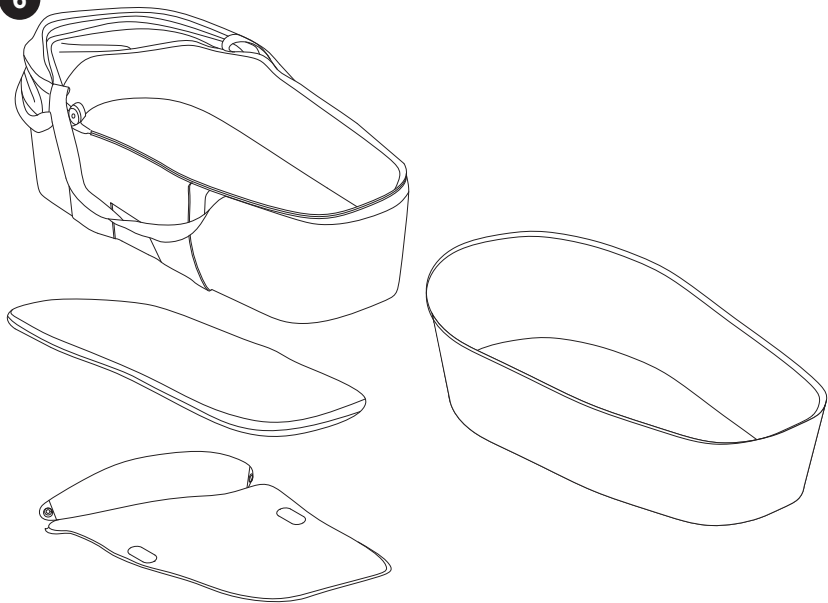



GOLD

CONTACT

EUROPE AND ASIA

gb GmbH
Riedingerstr 18
95448 Bayreuth
Germany
+49 (0) 921-78 511 - 0
info@gb-online.com

AMERICAS

Columbus Trading-Partners USA Inc.
560 Harrison Avenue
Suite 500
Boston, MA 02118
USA
Customer Service 1-844-543-2020
orders.us@columbustp.com

AUSTRALIA

CNP Brands
20 Calarco Drive, VIC, 3030
Australia
Customer Service 1300 667 137
info@cnpbrands.com.au

NEW ZEALAND

Wainhouse Distribution,
2-6 Argyle St, Morningside,
PO Box 41-014, St Lukes, Auckland
New Zealand
Customer Service: 0800 567 5000
helpline@wainhousedist.co.nz